


GOLD LAMINATE



Antes de montar el producto, lea las instrucciones de instalación.

Before using the product please read the user manual.

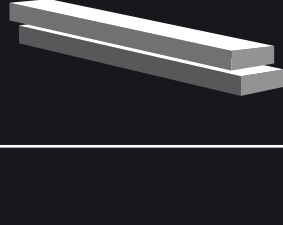

Deje las cajas sin abrir planas en el suelo durante 48 horas antes de la instalación.

Leave unopened boxes flat on the ground for 48 hours prior to installation.

Instrucciones de instalación

1. La solera debe estar seca <2% humedad y nivelada <2mm por metro.
2. Se requiere un perímetro de dilatación obligatorio de 15mm entre el suelo laminado y las paredes. Utilice juntas de dilatación en los pasos de puerta.
3. Los zócalos deben fijarse a la pared, en ningún caso atornillar nada al suelo laminado.
4. La distancia mínima entre testas de las lamas de filas colindantes debe ser de 40cm.
5. La tirada máxima sin junta de dilatación es de 10 metros lineales longitudinalmente y 8 metros lineales de ancho. Si se superan estas medidas se deben utilizar obligatoriamente juntas de dilatación.
6. Para evitar diferencias visibles de tonalidad, utilizar números consecutivos de lotes de fabricación.
7. Es obligatorio el uso de UNA SOLA manta foam debajo del suelo laminado.
8. No debe instalarse el suelo laminado sobre moquetas, otros suelos flotantes ni en espacios húmedos como cuartos de baño.
9. La temperatura de la solera debe ser superior a 15°C. y la humedad <2%. La temperatura de la estancia debe ser superior a 18°C. La humedad ambiental no puede superar el 75%.
10. En el caso de tener tuberías de calefacción subterráneas, se debe dejar un perímetro mínimo de 30mm de separación entre la tubería y el suelo laminado.
11. En el caso de instalación sobre suelo radiante, consulte a un instalador cualificado.
12. De acuerdo con los estándares internacionales de la norma TS EN13329 el espesor del suelo laminado tiene una tolerancia de +/-0,5mm.

Después de la instalación:

- Deben de utilizarse fieltros en las patas de sillas y muebles. Evite arrastrar muebles pesados sobre el suelo laminado.
- Las sillas y mobiliario con ruedas deben utilizar ruedas de goma blanda tipo W (Norma DIN 68131)
- El suelo laminado debe limpiarse con una mopa o un paño ligeramente humedecido. NO UTILICE AGUA NI DETERGENTES.

Installation instructions

1. Floor selected for parquet insertion must be in dry form and must be purified from humidity.
2. In between the parquet and wall 15mm gap is required.
3. Exactly baseboards attachment on the parquet must be avoided from screws, baseboards must be fixed over the walls by means of appropriate angle alignment.
4. The distance between the heads of the two parquet elements should be 40 cm.
5. Over the upholstery applied region insertion must be handled aligning maximum 10m longitudinally and over the width maximum corresponding to 8 m over the parquet panels. Out of these measurements transmission profiles must be used over the huge regions.
6. Batch numbers on the packaging of products to be assembled must be checked. Products must be used by following production dates and batch numbers for consecutive works.
7. Humid cloths must be used in parquet floor sanitation.
8. Textile material (carpet, rug etc) coated floors, toilets, bathroom as wet floors over the Betopan (precast concrete panel) and marble floors must be eliminated from applications.
9. Temperature of the insertion environment must correspond to min. +18 C , floor temperature must correspond to min. +15 C . humidity rate of the environment selected for insertion must be max. %75.
10. Throughout the pipe passages measuring the pipe locations make the determinations and over the coating elements sign up considering the edge margin. Enlarge the holes exceeding minimum 30 mm the pipe diameter. Cut the coating element approaching in 45 grade angle to the holes. Attach the dismantled component to its segment making the adjustment based on its point.
11. If floor heating system shall be applied exactly consult to expertise approach before the insertion.
12. According to the international standards of TS EN 13329, the thickness of the parquet element indicated on the box may vary up fo 0.5 mm between the maximum thickness and the minimum thickness.

After Tiling

- Parts made of plastic or felt should be used on the bottom of the feet of the moving furniture.
- The heavy furniture should be replaced by removing the places and should not be shifted on the parquet surface. Wheeled furniture and wheels of seats and chairs should be soft type.
- The surface of the parquet should be wiped off with a slightly moistened cloth instead of wetted.

